

IBOX INSTALLATION




Installation on the wall

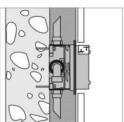


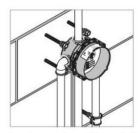

Installation in front of the wall. Shown here with M $\,10$ stock screws as variable spacers.

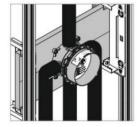

Mounting on a carrier system

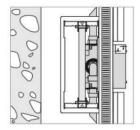





Installation on prefabricated house mounting plates or finished cells



Installation directly into the wall

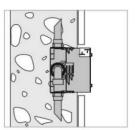

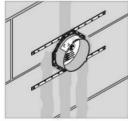

Installation with mounting rail set





